



Shed Assembly Instructions


1. Set patio slabs on prepared level location for shed
2. Set floor level on slabs

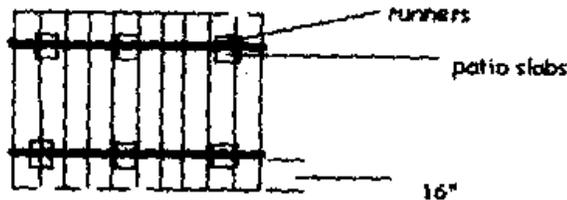

3. Stand up back wall
4. Slide side walls into back wall
5. Stand up front wall and slide in side walls
6. Fasten all four top corners on the inside
7. Check to be sure that the walls are positioned properly at the bottom around the floor, and fasten the walls down to the floor. Do not nail in the door opening because it will have to be cut out.
8. Top 2x4 wall plates are marked as to where the rafters go, nail rafters on the "X" side of the mark. Be sure the notch in the rafter is tight against siding board.
9. On each end rafter, fasten the side wall boards into the rafter.
10. Put gable end fascia boards on flush with the top of the rafter so that the roof sheathing lays flat on rafters and the fascia boards. Nail the fascia boards into the batons.
11. Put on the front and back fascia board. They will have to be cut to length. Length will be from outside edge of each gable end fascia board.

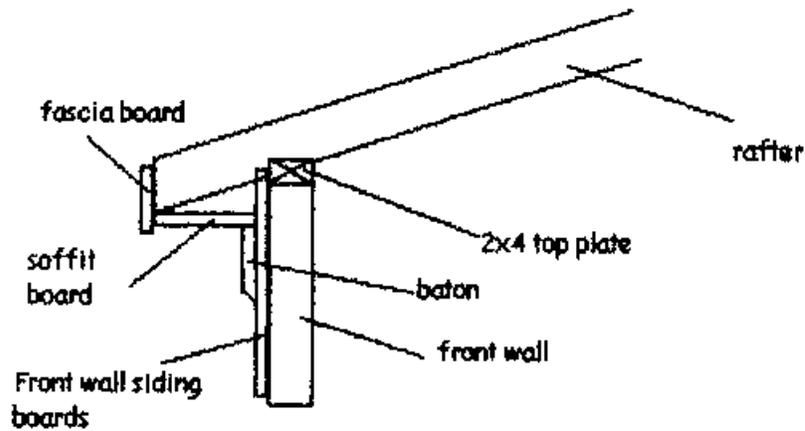

12. Install the front soffit board between the fascia board and the front wall siding boards. The length will be from the outside edge of the end rafters. You will most likely have to cut the front soffit for width and length because they sometimes vary a little from shed to shed, so therefore it is better that they be cut on site.
13. If you are building a **Saltbox Shed**, then you will now install the two decoration pieces on each side of the front soffit board, in line with the side wall boards. You may have to cut them for width (same size as your soffit)
14. If you are building any shed besides the Saltbox, then you will install a piece of pine at each end of the soffit, in all four corners, in line with the side wall boards.
15. You may now finish off the four outside corners, with the batons provided. Cut them to length and fasten the corner batons with the baton nails.
16. You are now ready to apply the roof sheathing. Start the sheathing at the bottom by the fascia boards, even with the edge of the gable end fascia board, should leave you half on the rafter, at the other edge of the sheet. On the other side of the roof, start on the opposite corner of the shed, so that the joints of the sheets can be scattered. All the pre-cut plywood will fit in the appropriate spot.
17. Apply the metal galvanized eave starter at the front and back fascia boards
18. Now is the time to apply shingles. Instructions are on the shingle bundles.

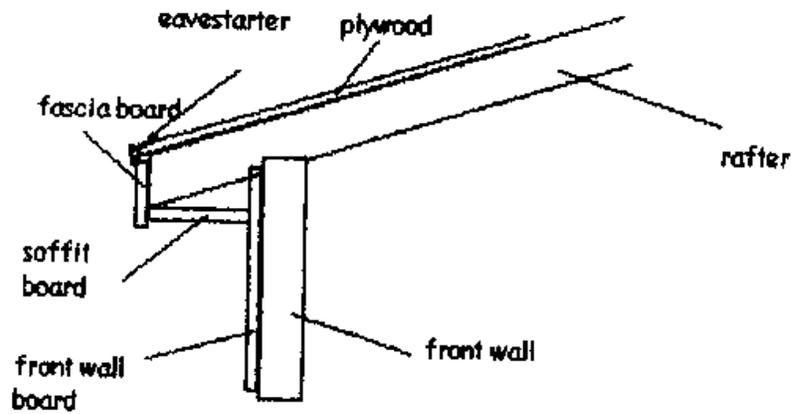

19. If your shed receives shutters, you may hang them now.

20. You are now ready to hang the doors.

- a. Position doors in opening
- b. Fasten the hinges to the trim on the shed
- c. Cut out bottom 2 x 4 in the door opening
- d. Install the door handle on the door that opens first
- e. If a double door, install the barrel latches on inside of the door to the header and the plywood floor. (fasten the 1-1/2" x 1-1/2' block, which is attached to the inside of the door, to the bottom of the door as a spacer to attach the barrel latch to)

You are now finished your shed, feel free to stain or paint it, and keep it looking great for years to come.

Thank you for your business

If you have any questions or comments, please feel free to call:

519-846-2345

Windmill Landscapes Ltd.

Website: www.windmilllandscapes.com

Email: info@windmilllandscapes.com